



# OPTO eye connection to RDS 52-SY control

RDS 52-SY control

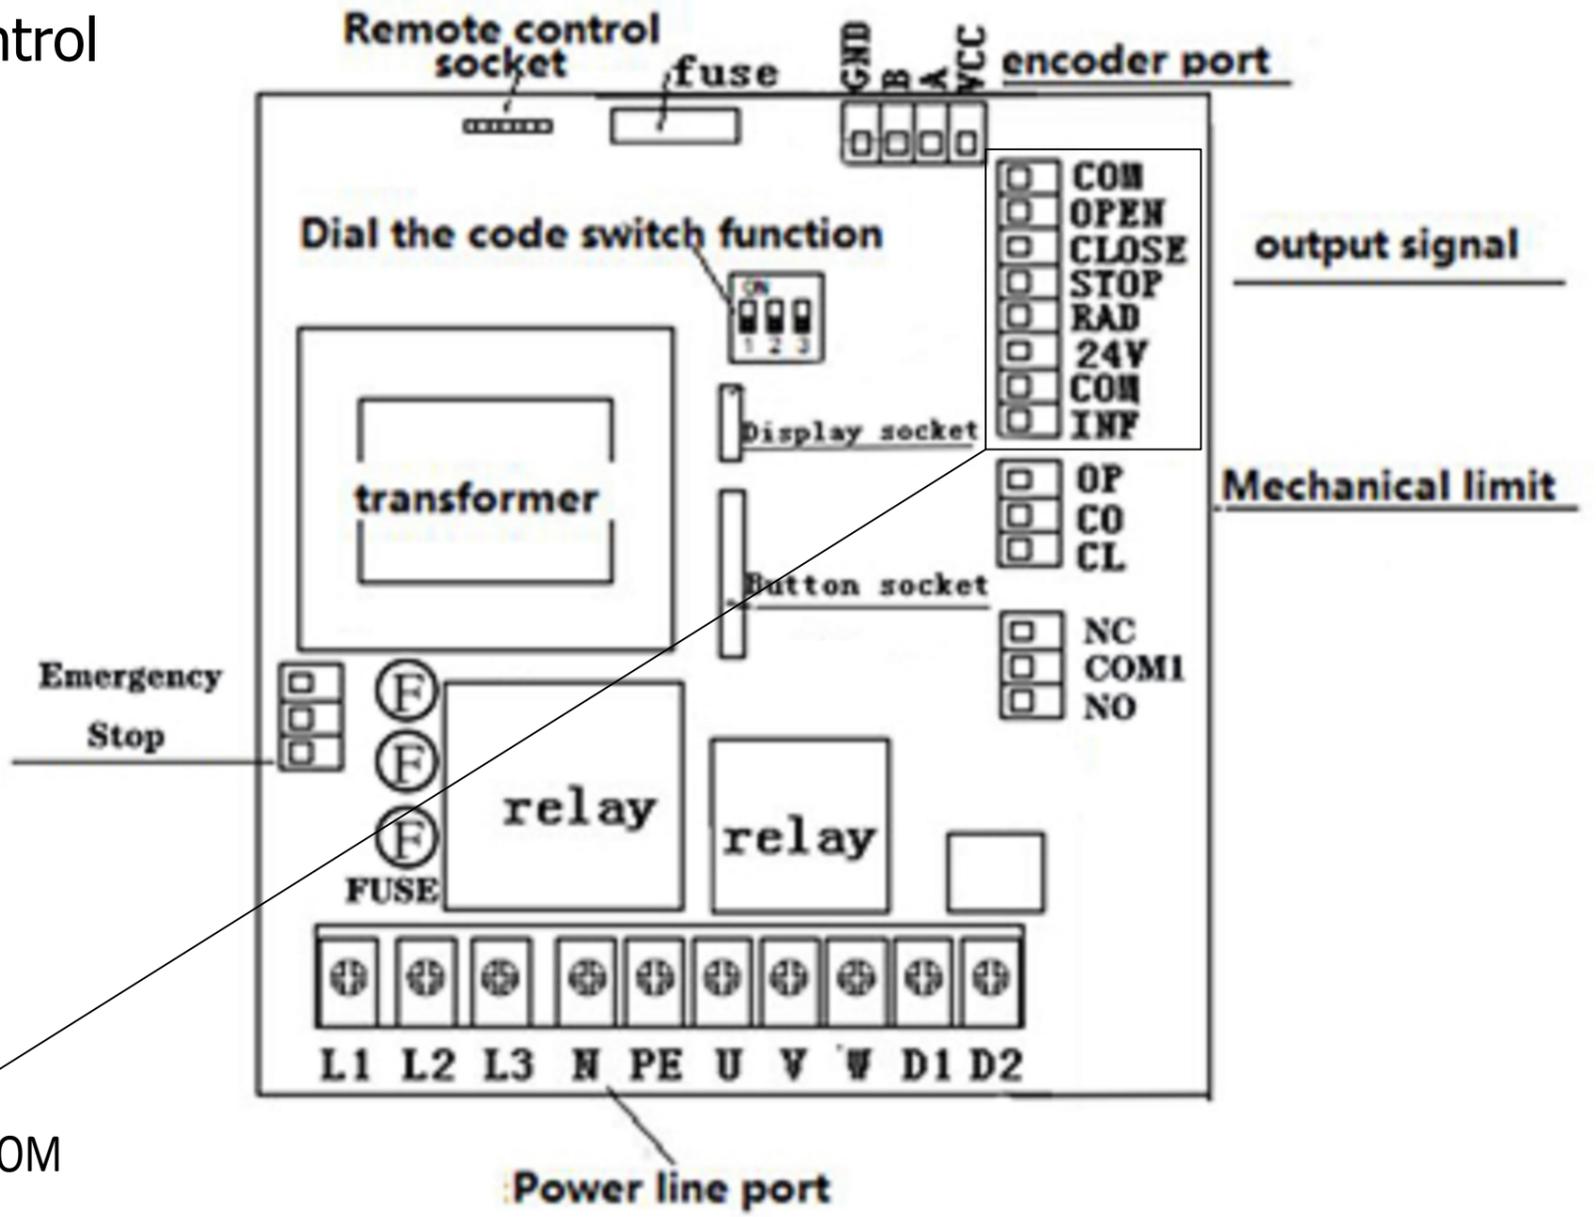

- COM
- OPEN
- CLOSE
- STOP
- RAD
- 24V
- COM
- INF

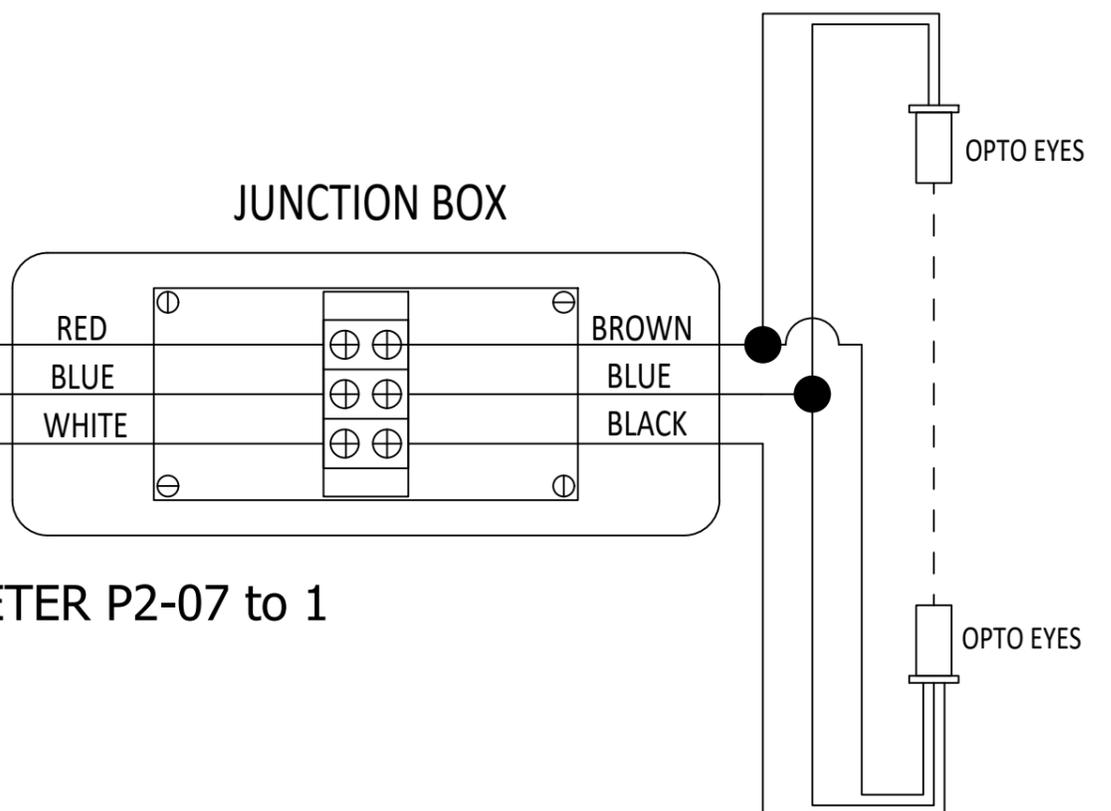

SEE DOOR MANUAL, SET - PARAMETER P2-07 to 1

