


PNEIMO sensor connection to RDS 52-SY control

RDS 52-SY control

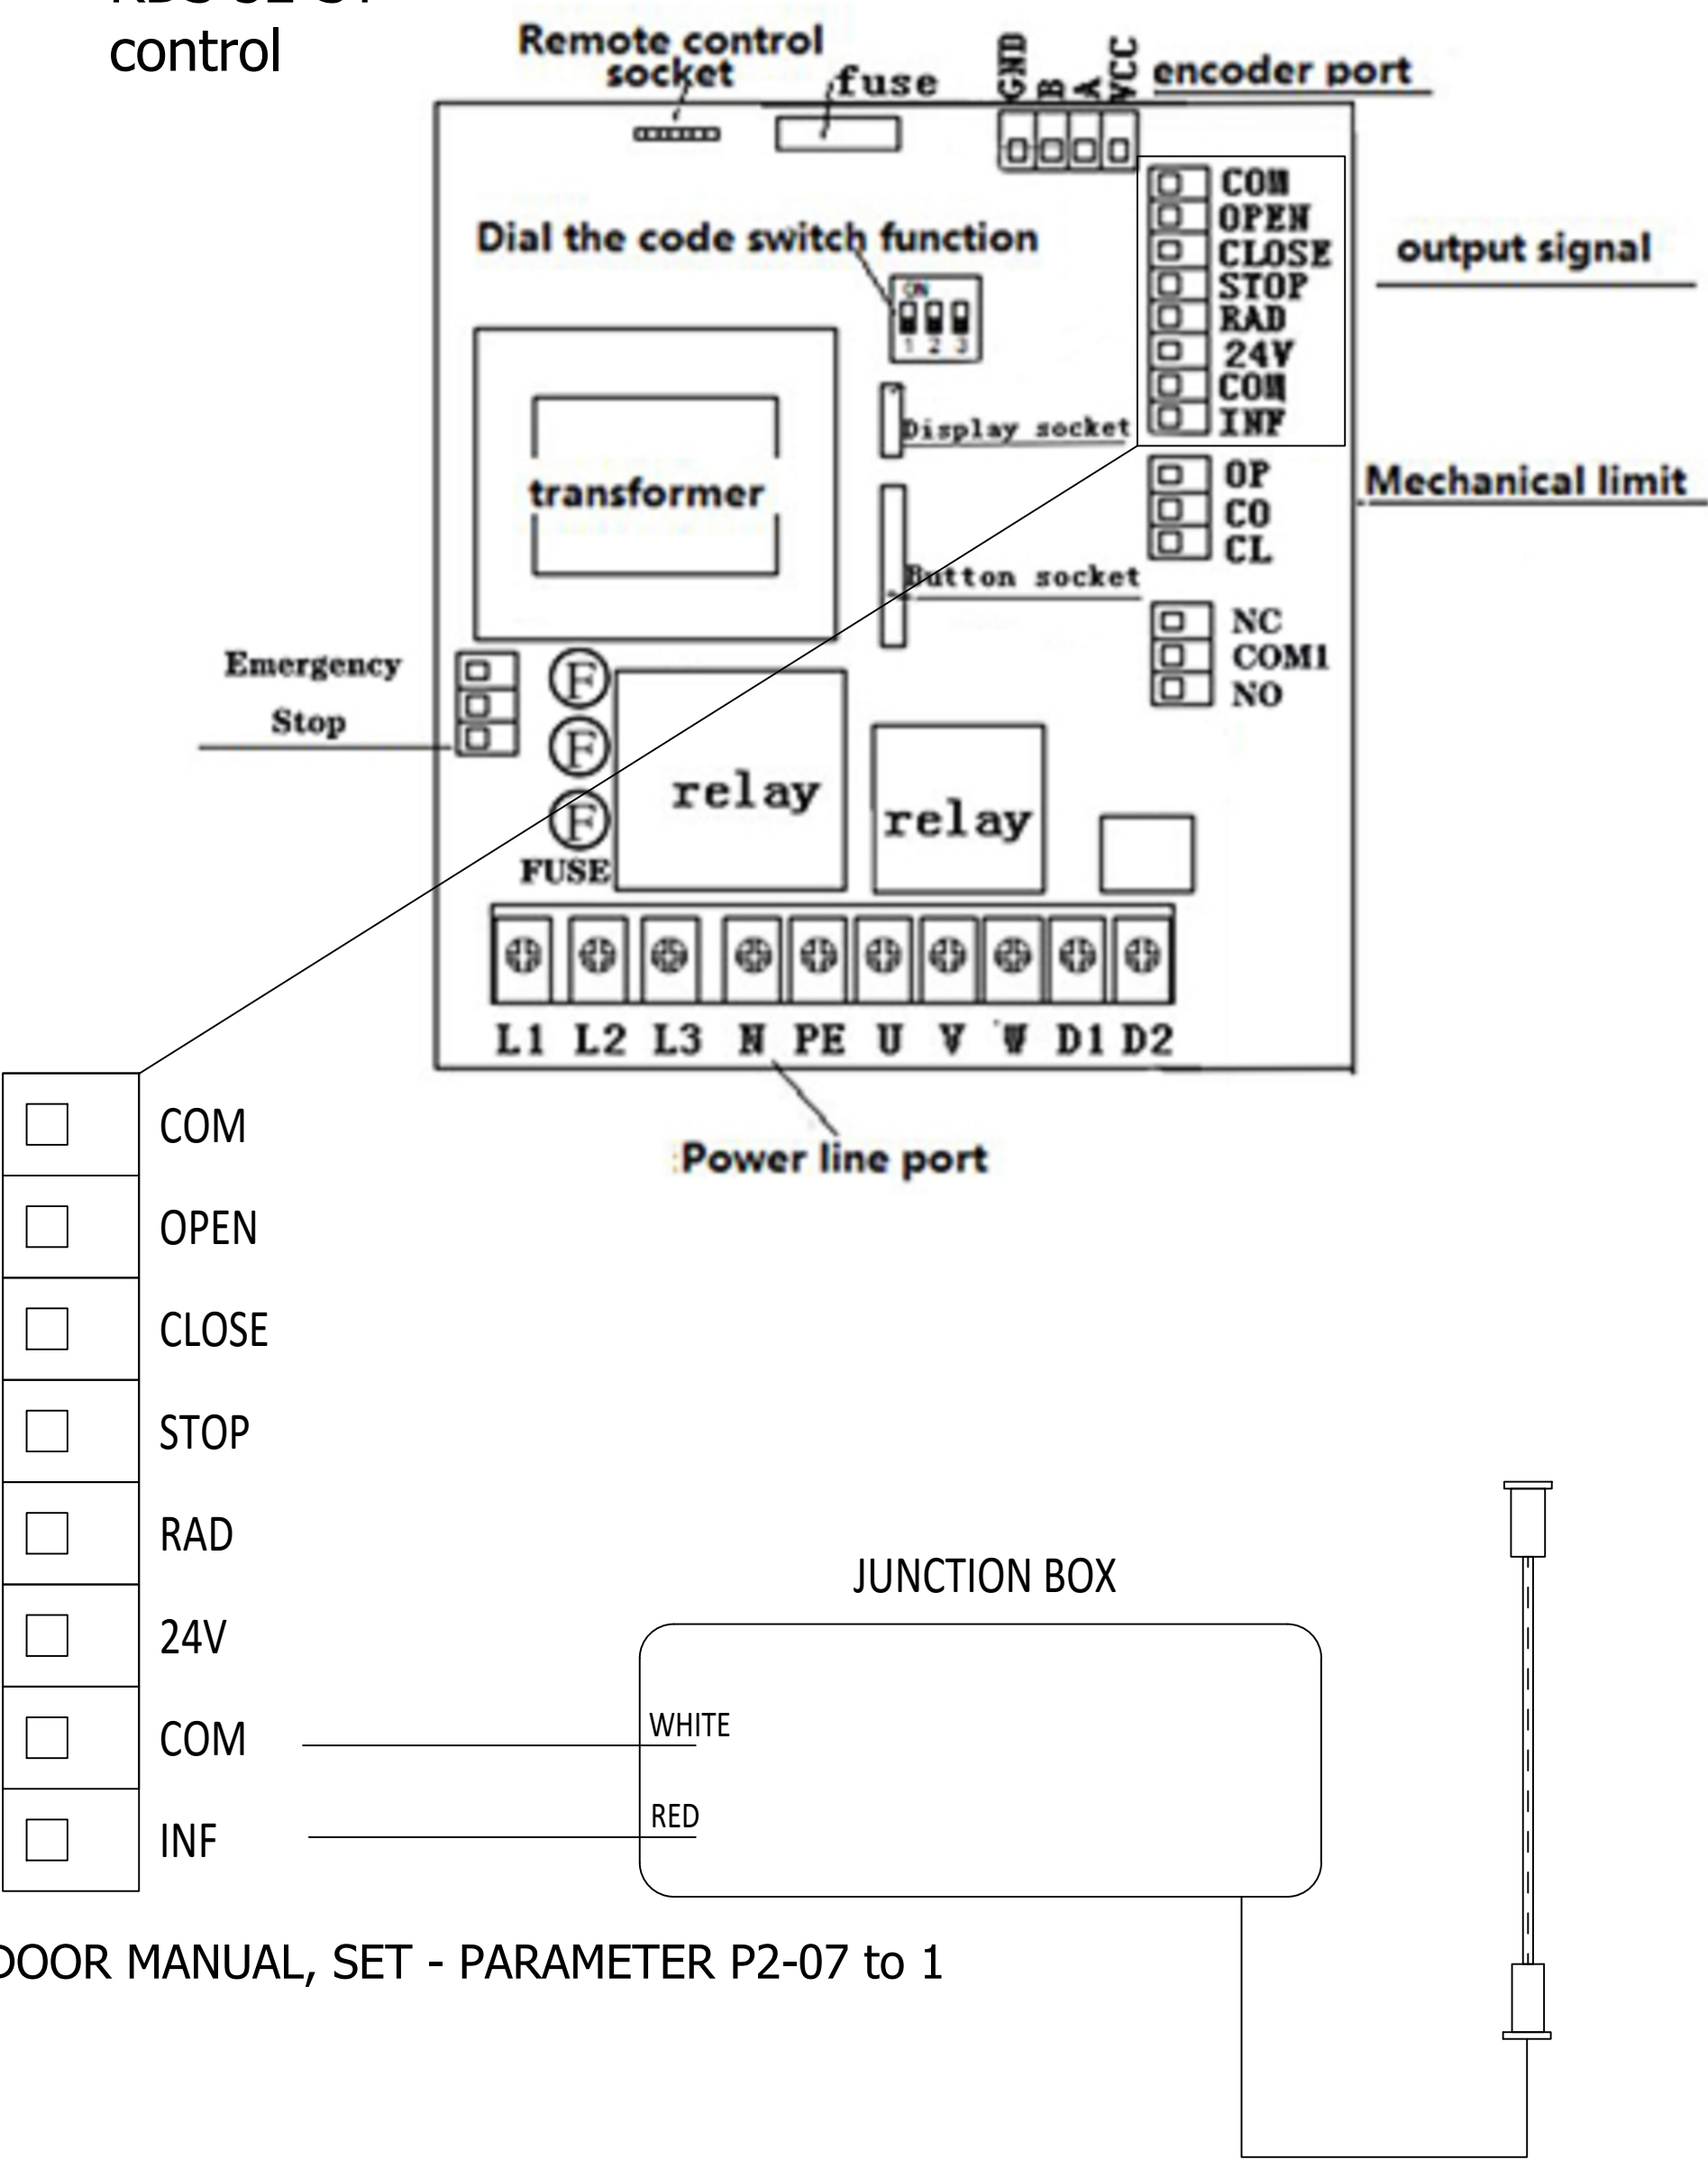

SEE DOOR MANUAL, SET - PARAMETER P2-07 to 1