



Opto eye + Pass door switch + Slack cable Switch connection to RDS 52-Y control

RDS 52-Y
control

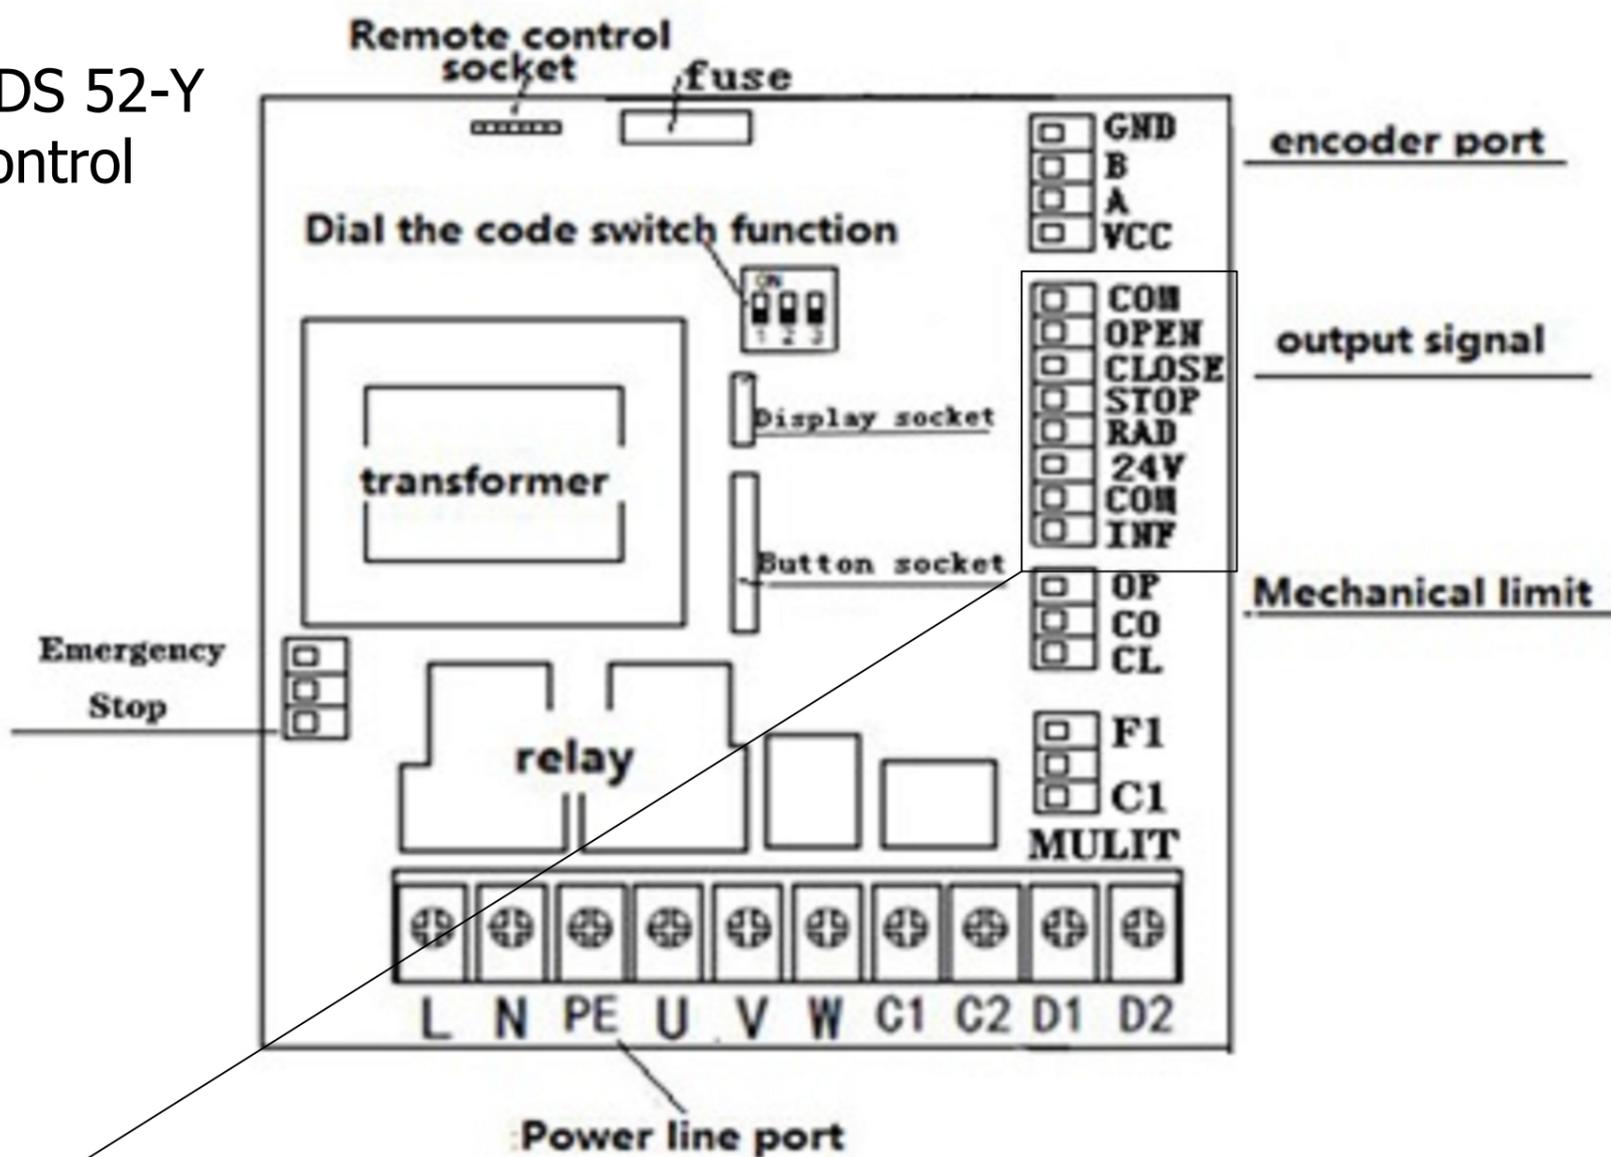

- COM
- OPEN
- CLOSE
- STOP
- RAD
- 24V
- COM
- INF

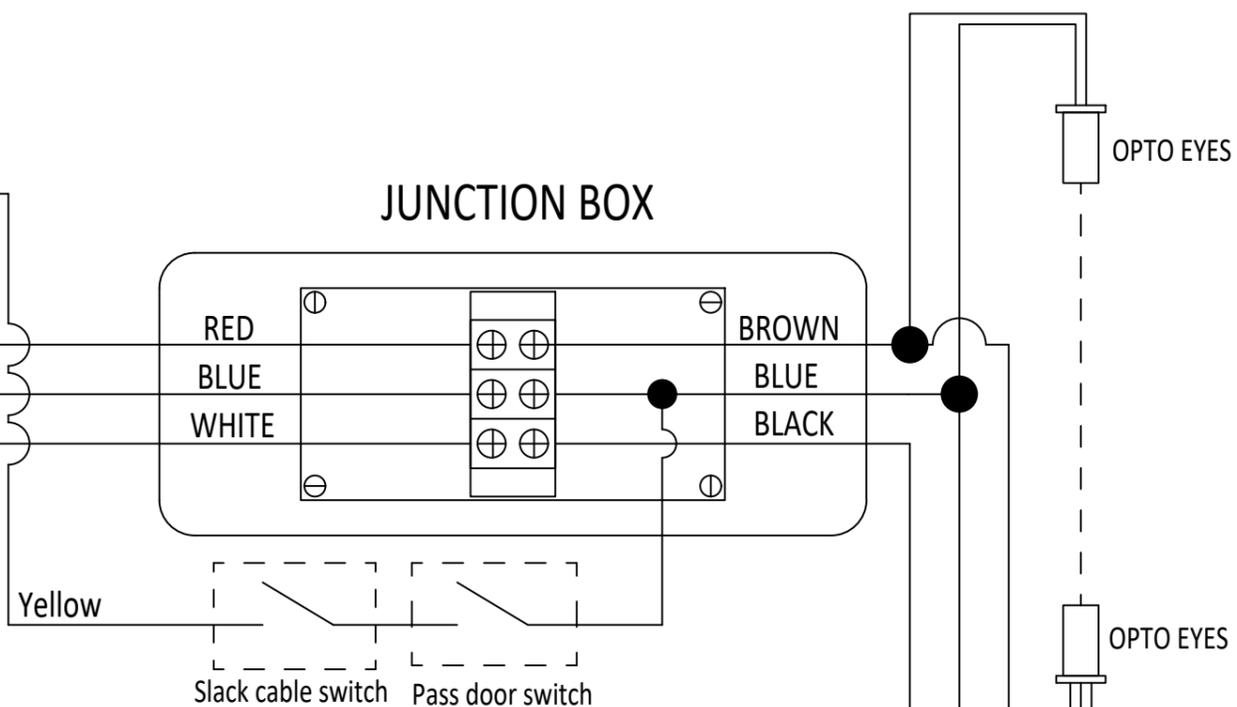

SEE DOOR MANUAL, SET - PARAMETER P2-07 to 1
and PARAMETER P2-08 to 1

