



PNEIMO sensor connection to RDS 52-SY control

RDS 52-Y control

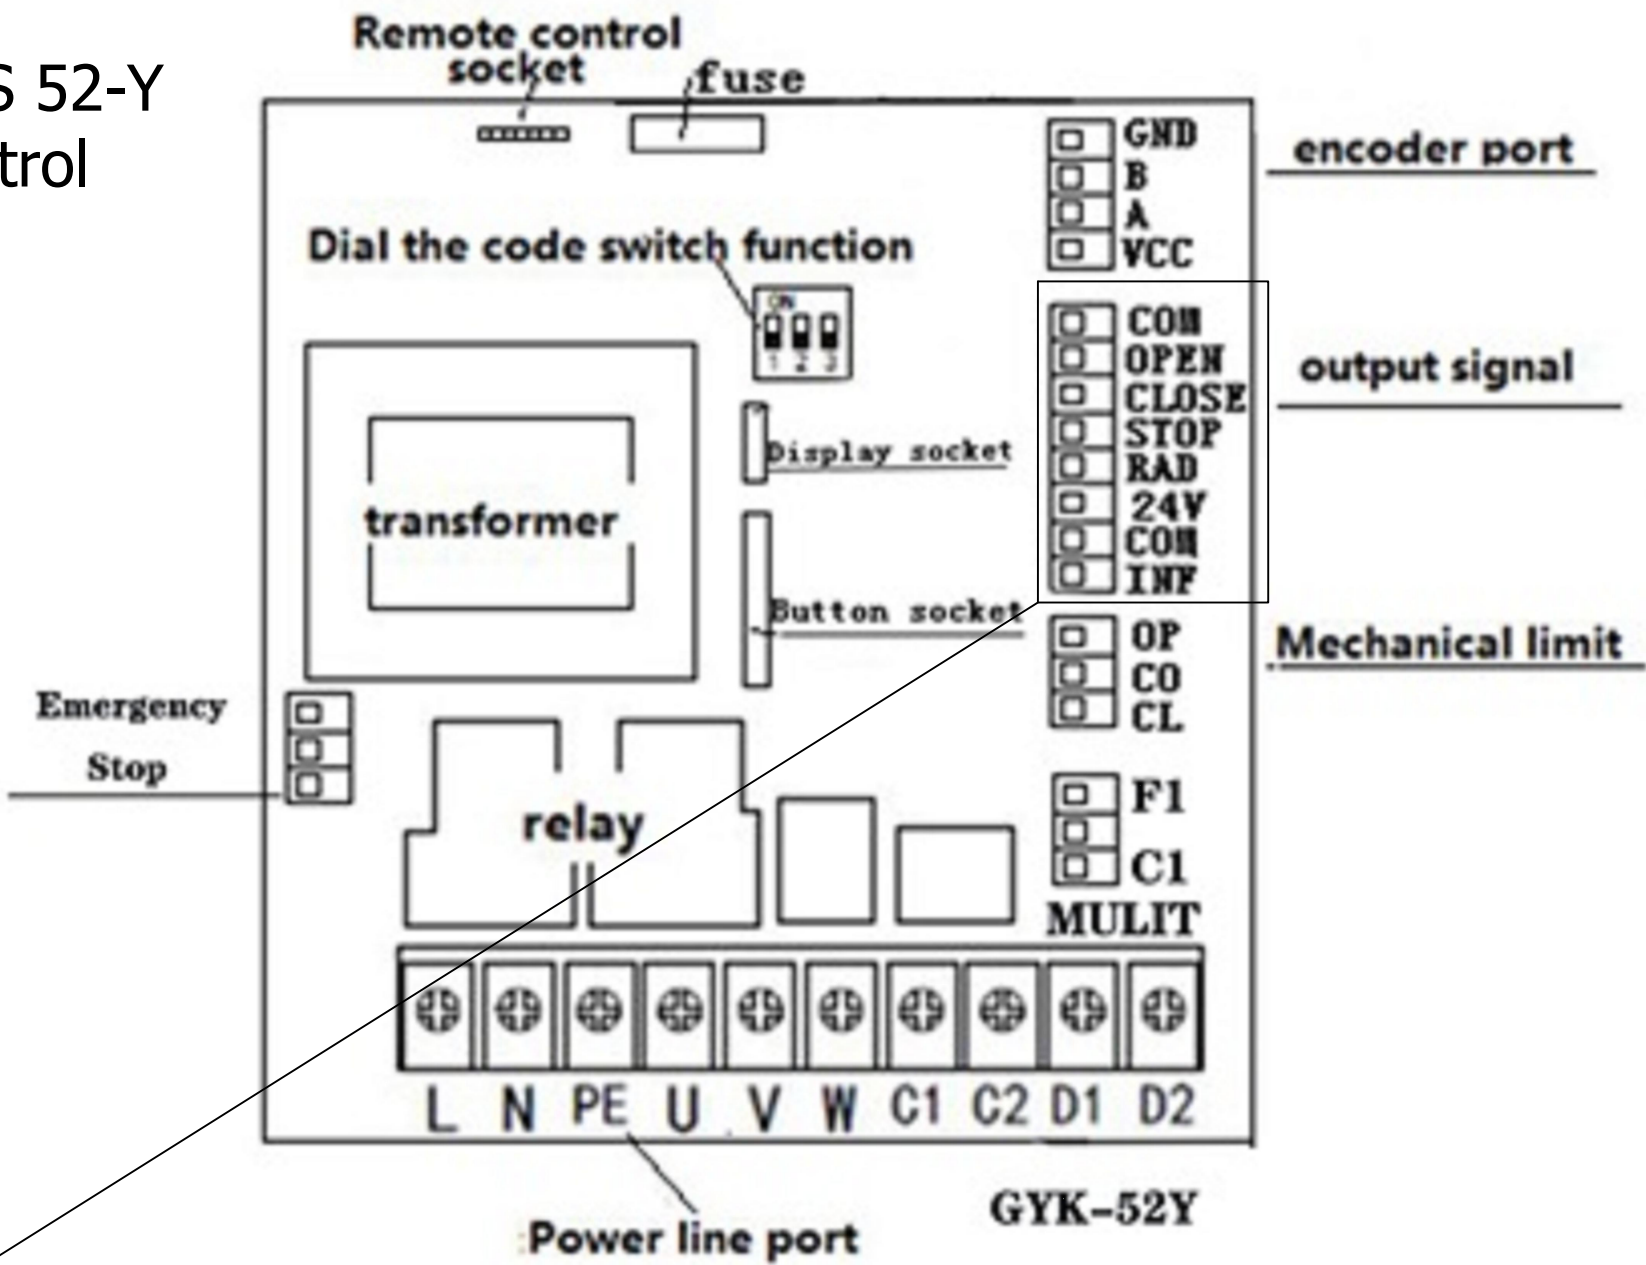

- ☐ COM
- ☐ OPEN
- ☐ CLOSE
- ☐ STOP
- ☐ RAD
- ☐ 24V
- ☐ COM
- ☐ INF

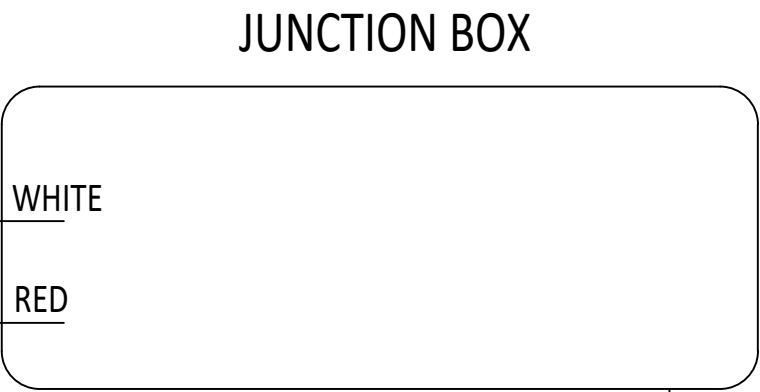

SEE DOOR MANUAL, SET - PARAMETER P2-07 to 1

