


# CONTROL UNIT TS970/TS971

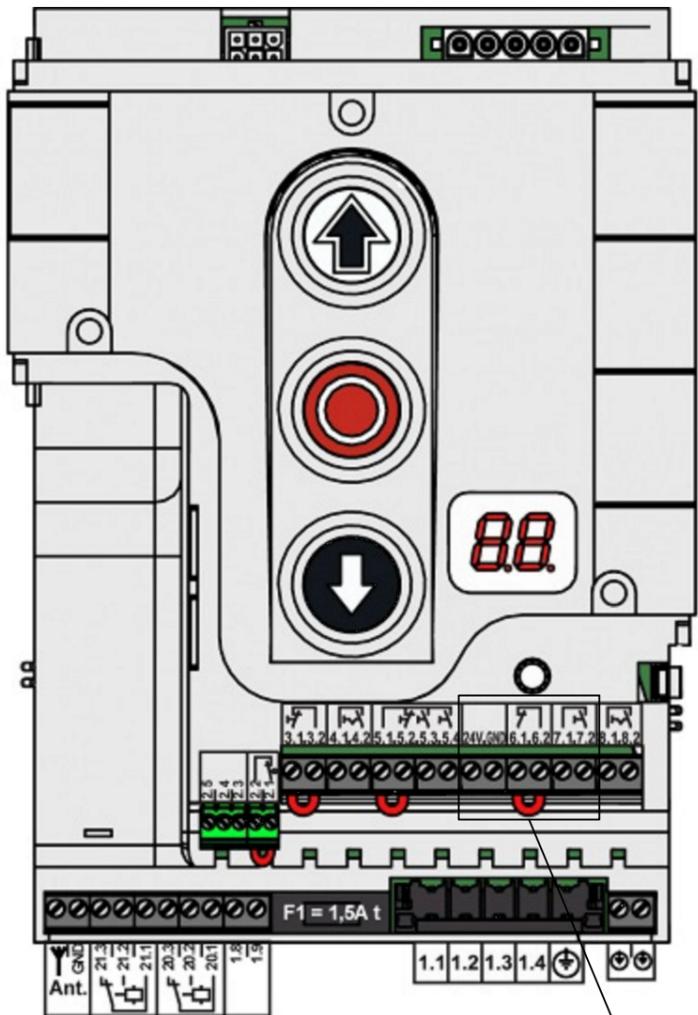

## Remote control programming sequence

1. Press the receiver button, the red light will come on.
2. Depending on which wire is connected to the control unit - press the remote control button 1,2,3 or 4, the red light on the receiver will flash.
3. Then press the same button on the remote control again, the red light on the receiver will flash several times.
4. The remote control is programmed.

To delete all programmed remote controls, press and hold the receiver button for about 10 seconds until the red light starts flashing.

